

FIG. 1
(PRIOR ART)

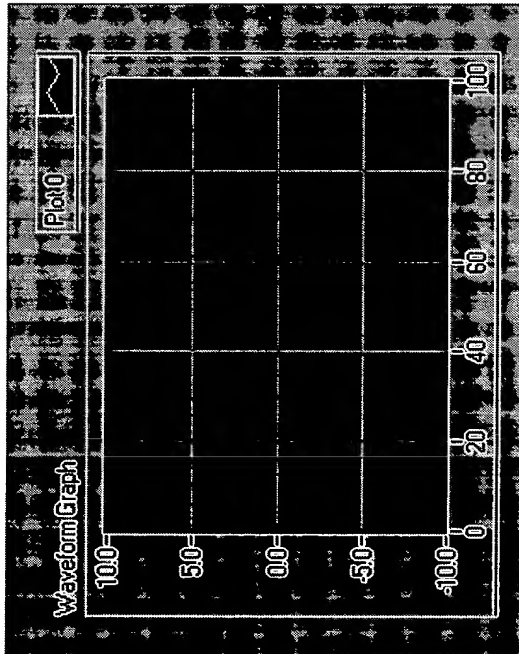 
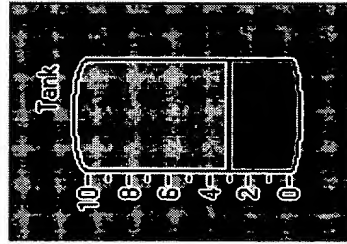 
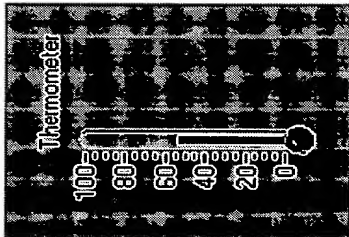 
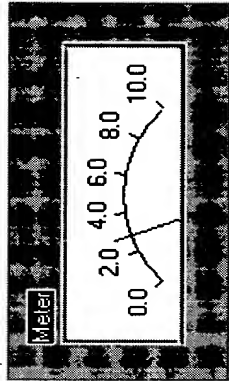 


FIG. 2
(PRIOR ART)

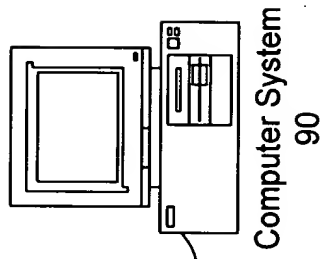 
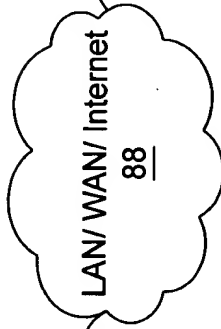 
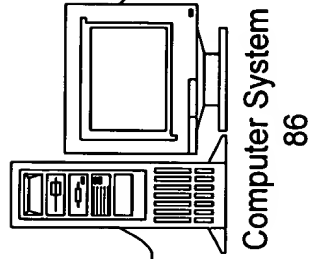 
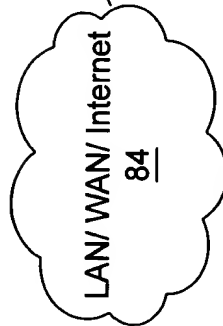 
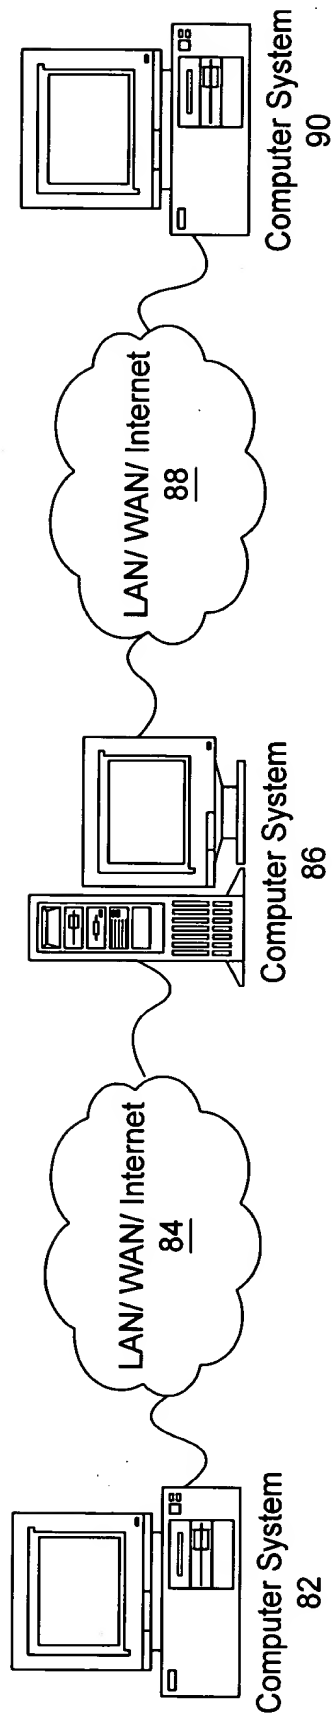 


FIG. 3A

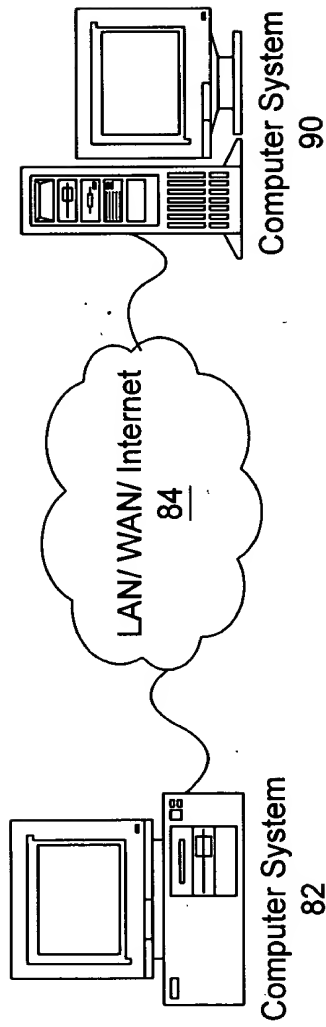 


FIG. 3B

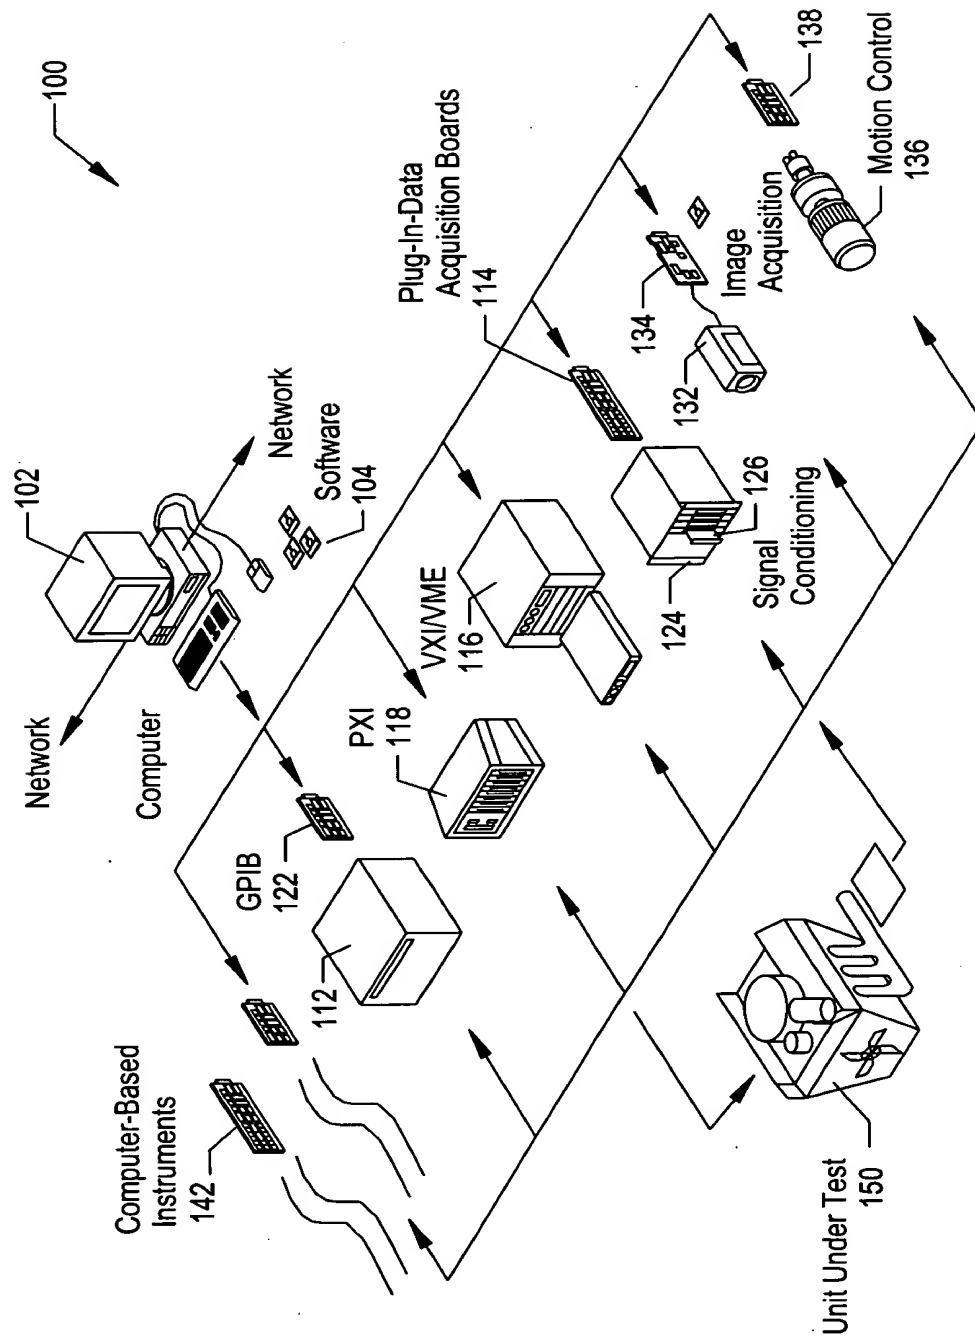 


FIG. 4A

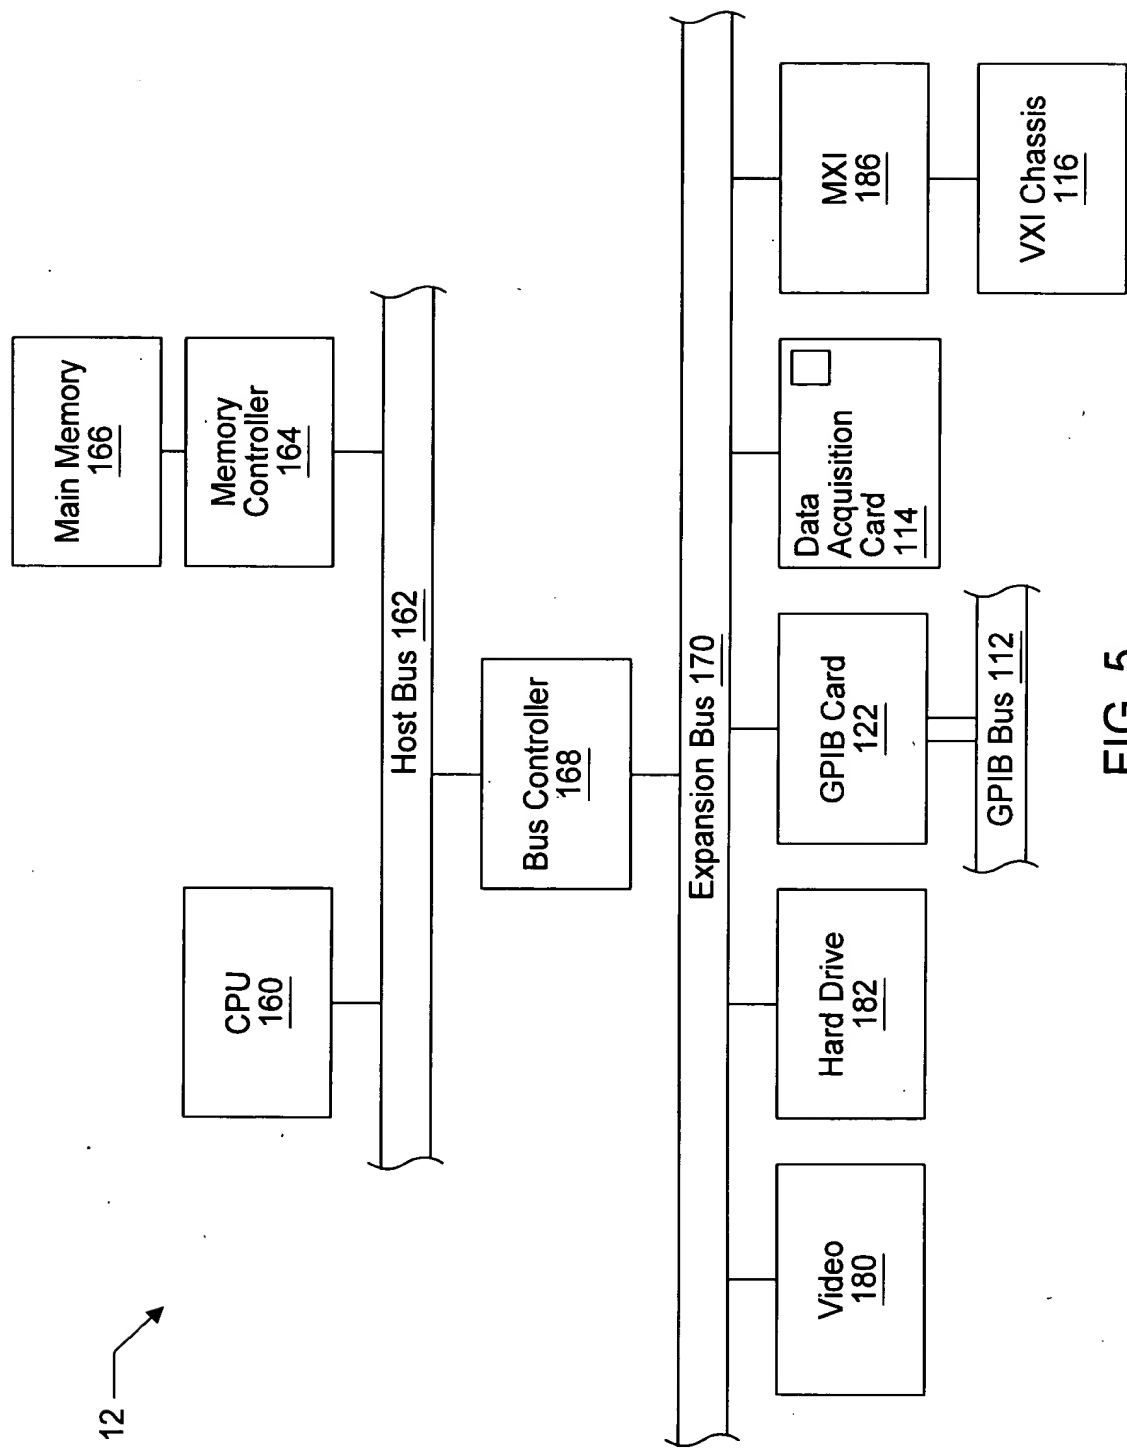 


FIG. 5

8/24

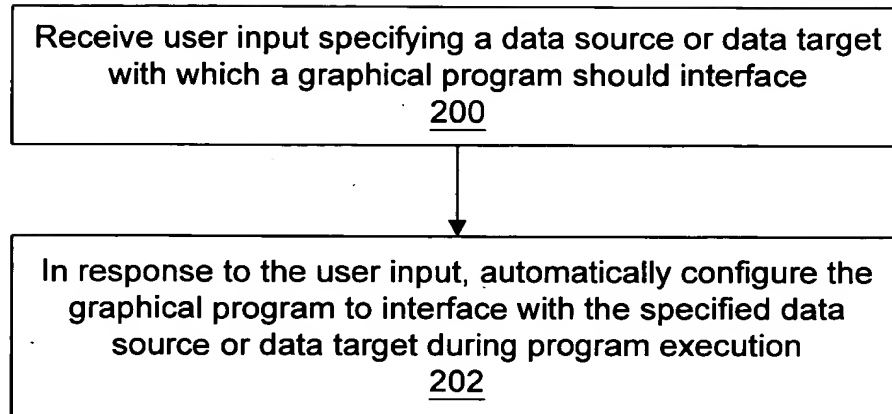 


FIG. 6

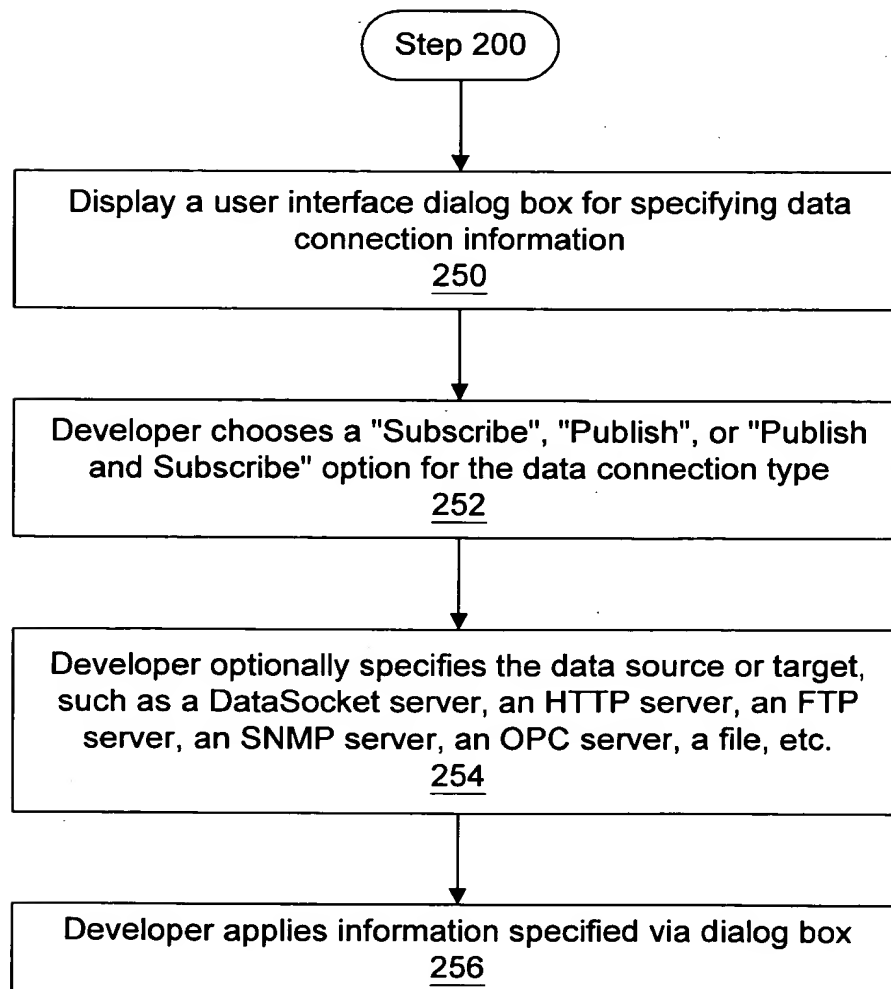 


FIG. 7

09/27/2008 12:30:00

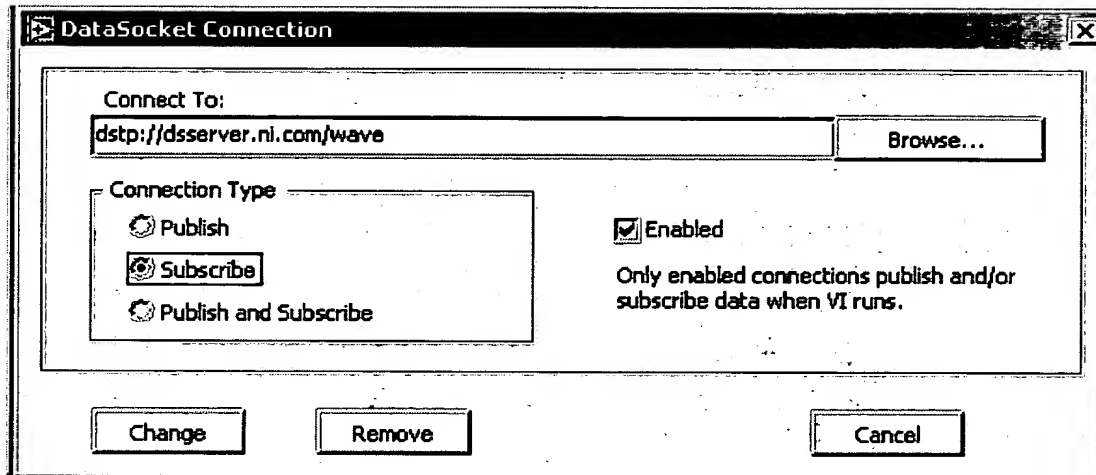 


FIG. 8

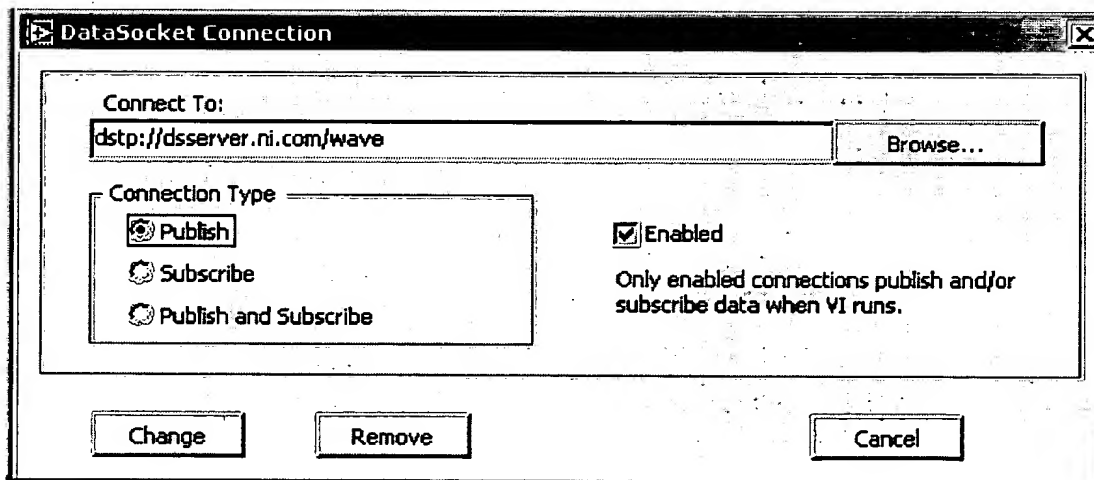 


FIG. 9

10/24

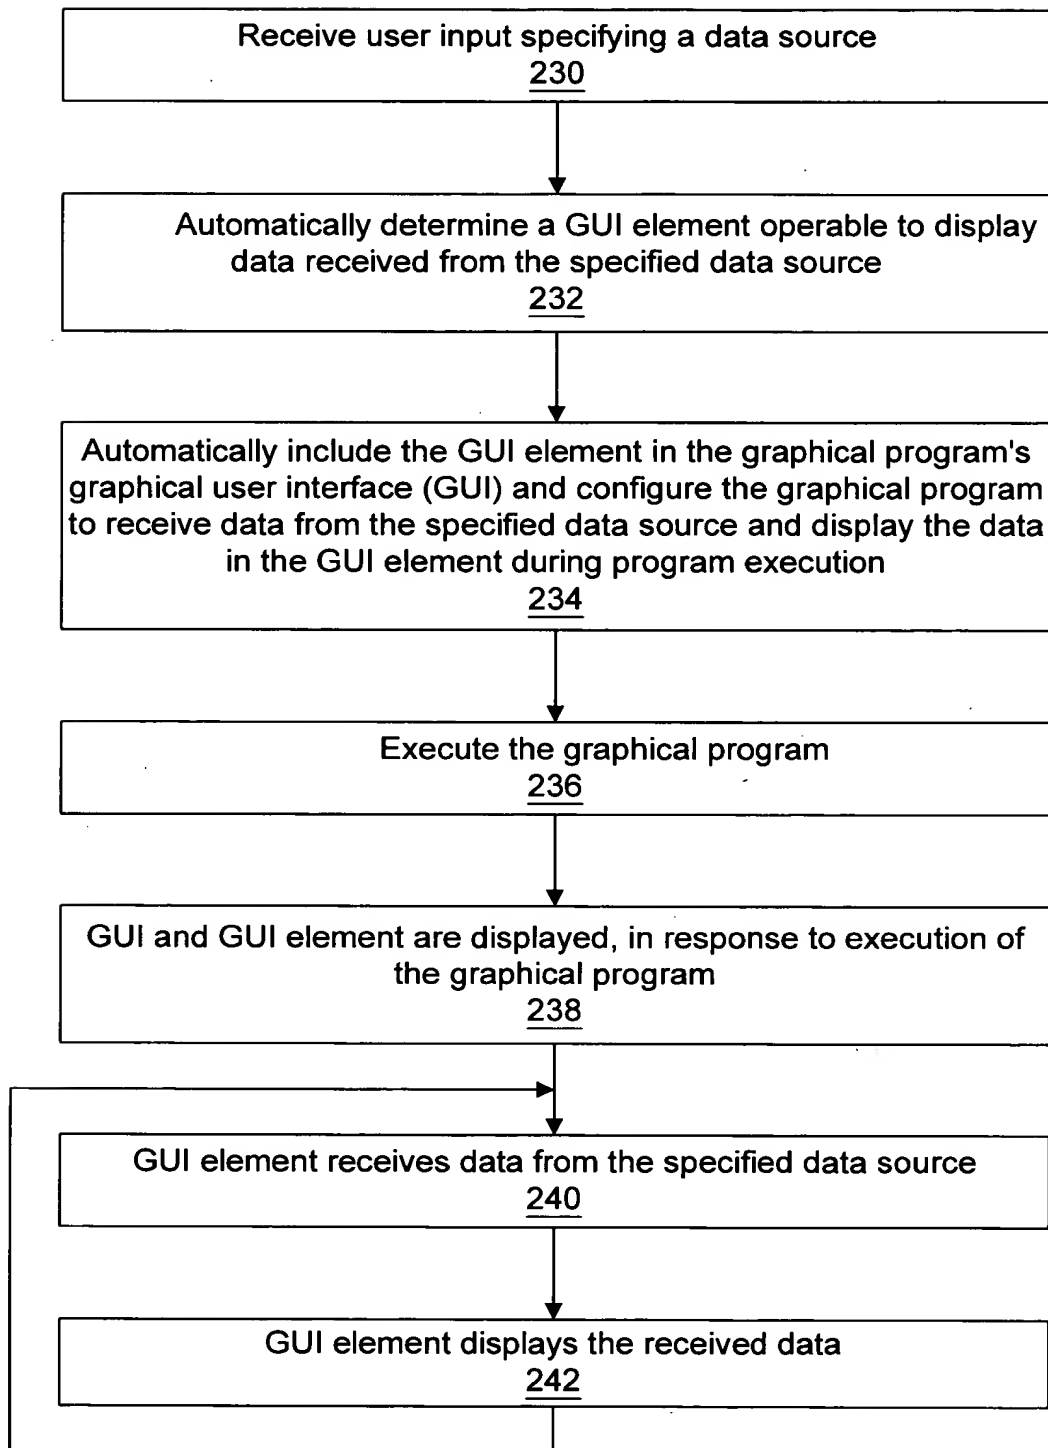 


FIG. 10



FIG. 11

12/24

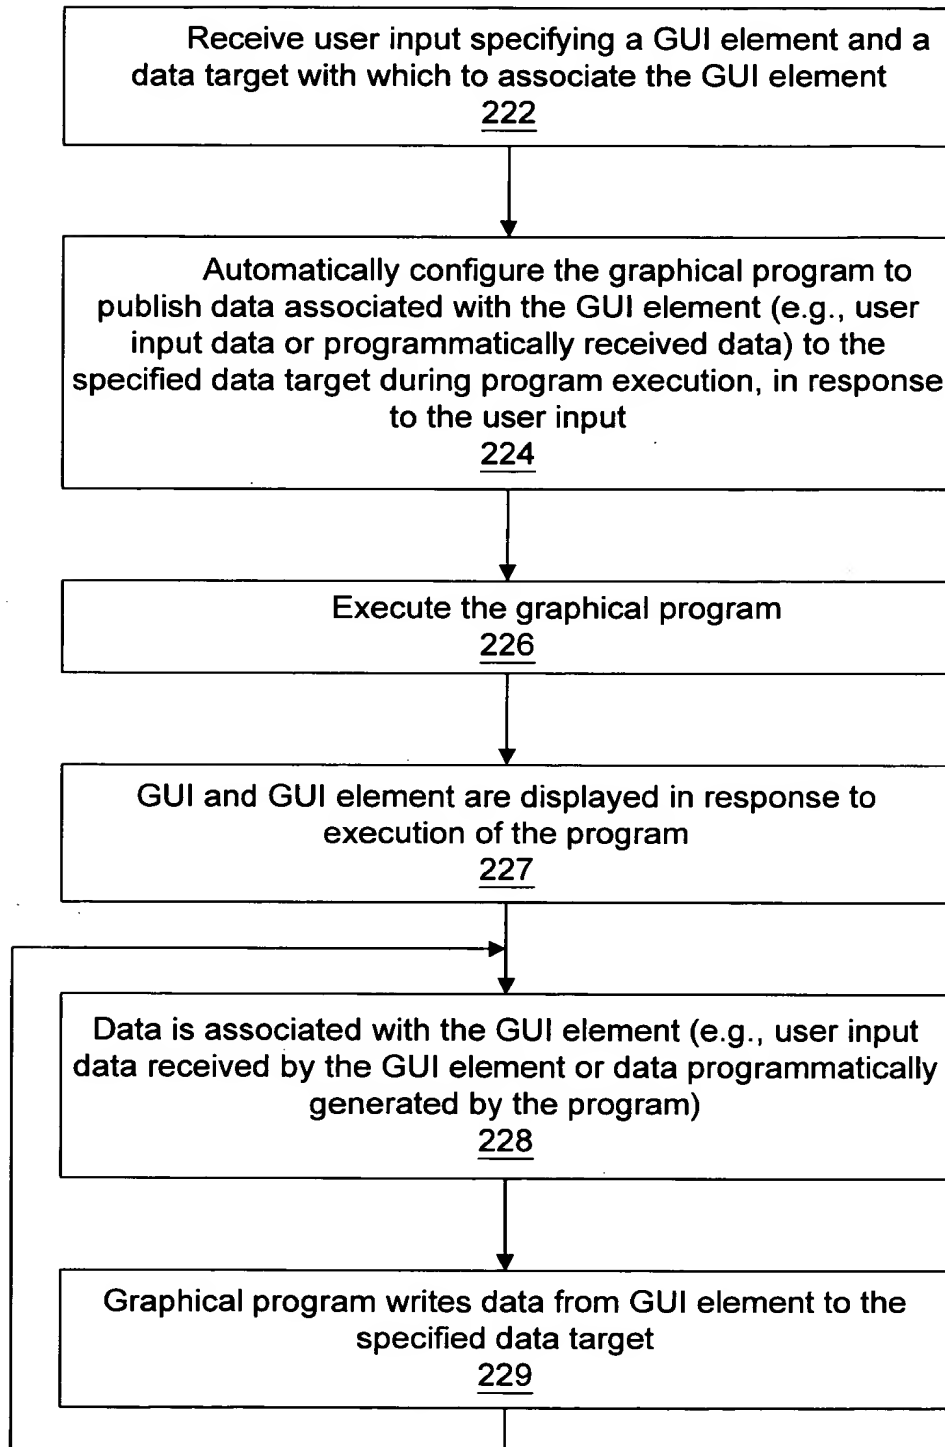 


FIG. 12

09737528.121300

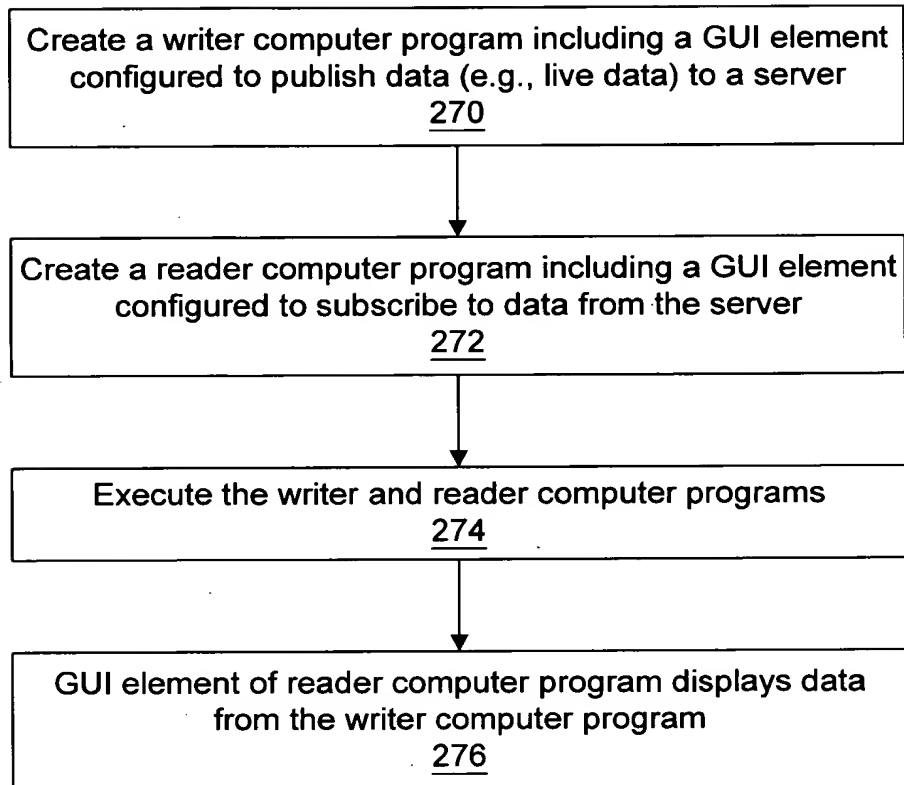 


FIG. 13

All we need to do is to keep VI running.

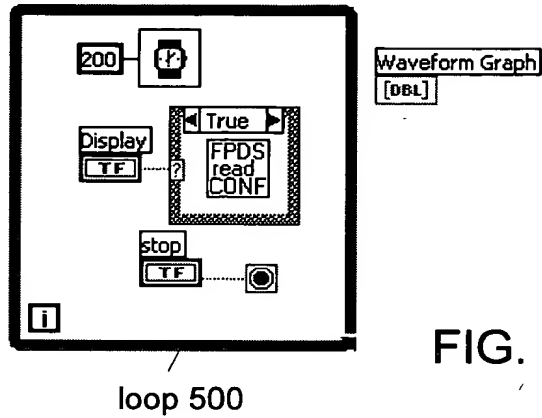 


FIG. 16

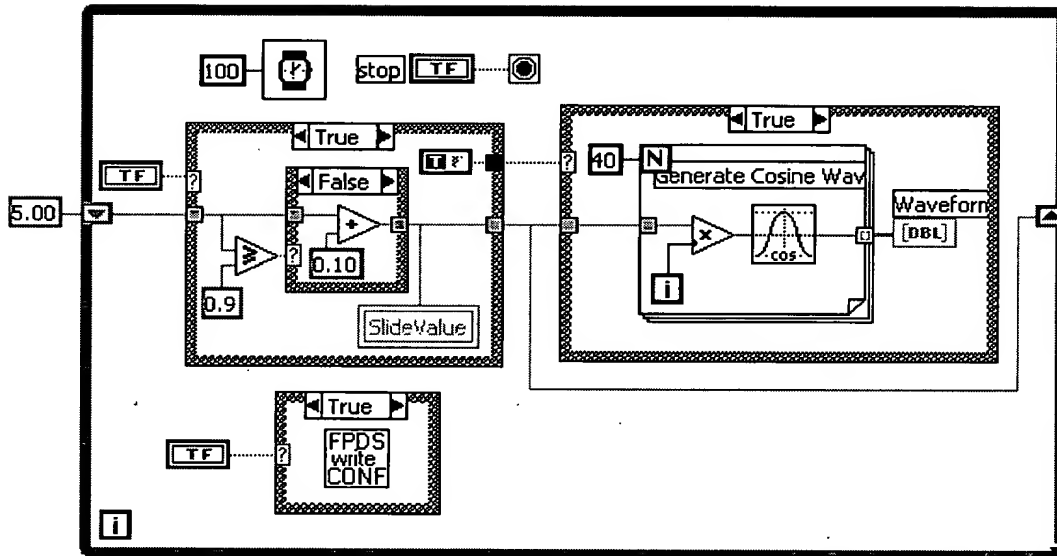 


FIG. 17

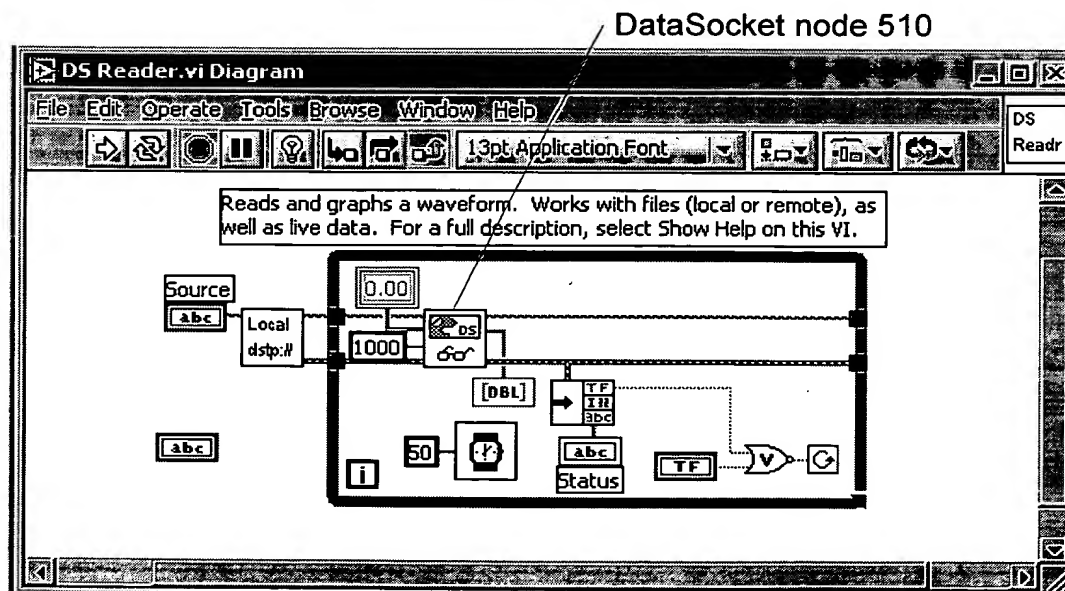 


FIG. 18

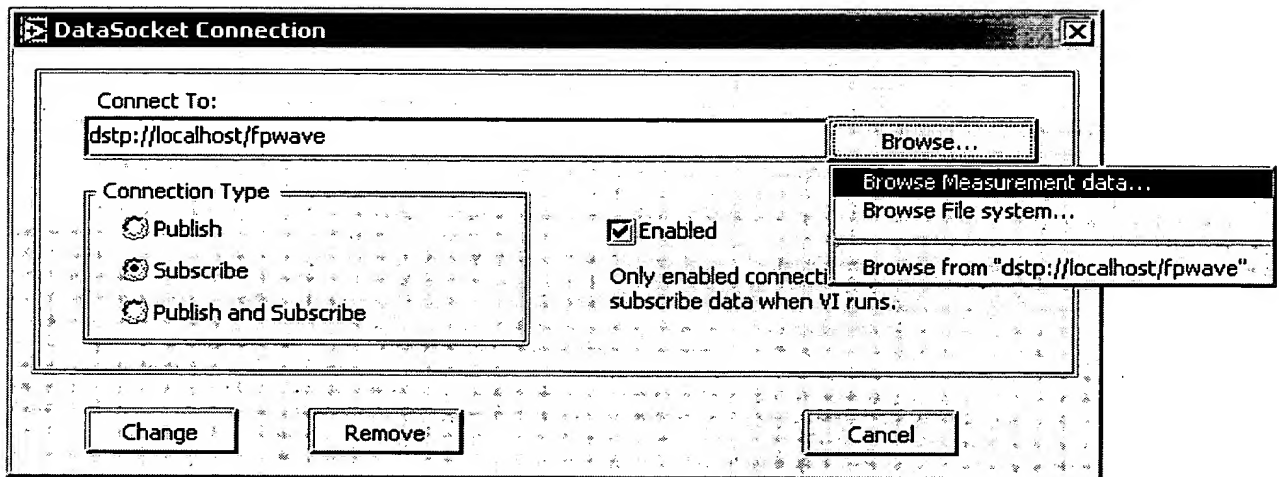 


FIG. 19

 

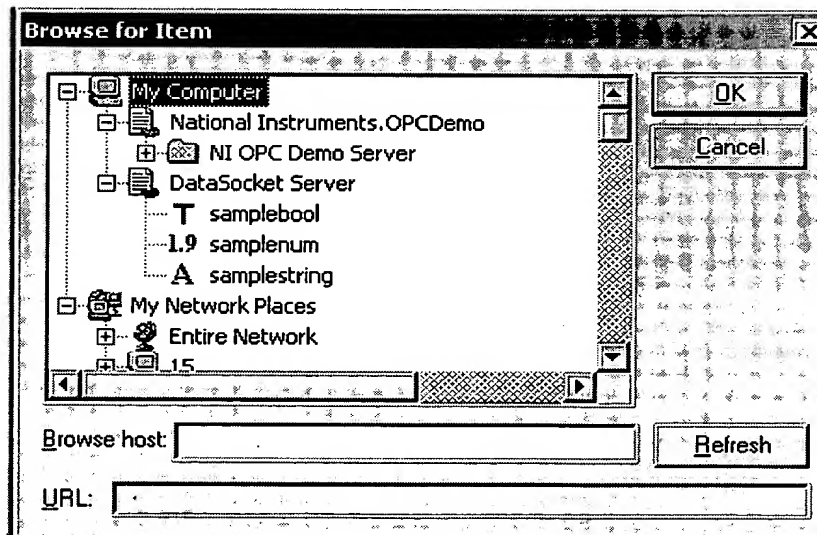


FIG. 20

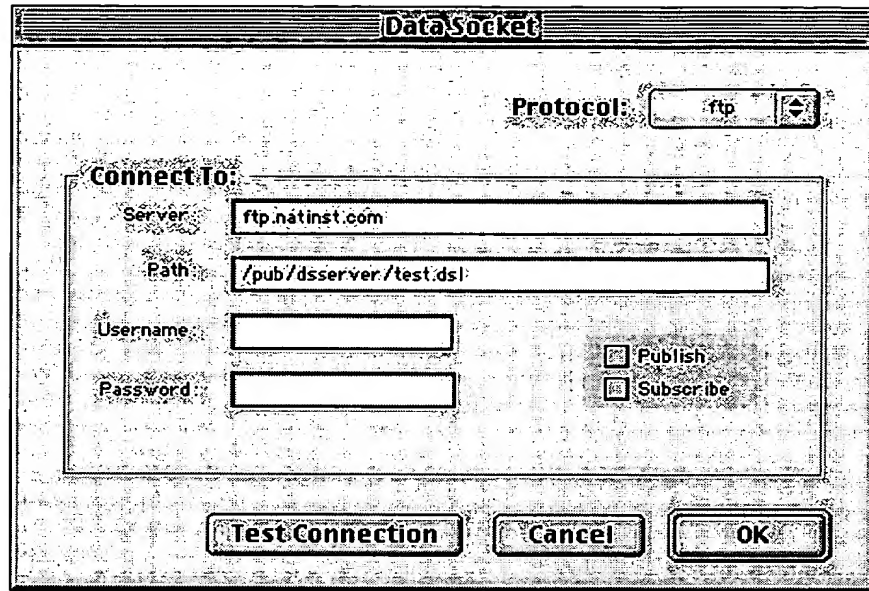

The image shows a 'DataSocket' dialog box. At the top right, there is a 'Protocol' dropdown menu set to 'ftp'. Below this is a 'Connect to:' section containing four input fields: 'Server' with the text 'ftp.natinst.com', 'Path' with the text '/pub/dsserver/test.dsl', 'Username' (empty), and 'Password' (empty). To the right of these fields are two checkboxes: 'Publish' and 'Subscribe', both of which are unchecked. At the bottom of the dialog are three buttons: 'Test Connection', 'Cancel', and 'OK'.

FIG. 21

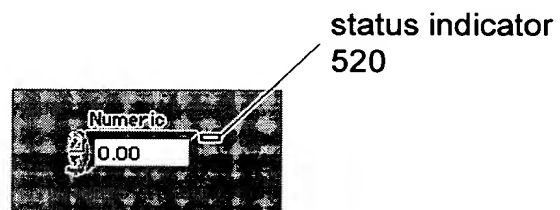

The image shows a 'Numeric' status indicator. It consists of a small icon of a person on the left and a text box on the right containing the value '0.00'. A line points from the label 'status indicator 520' to the text box.

FIG. 22

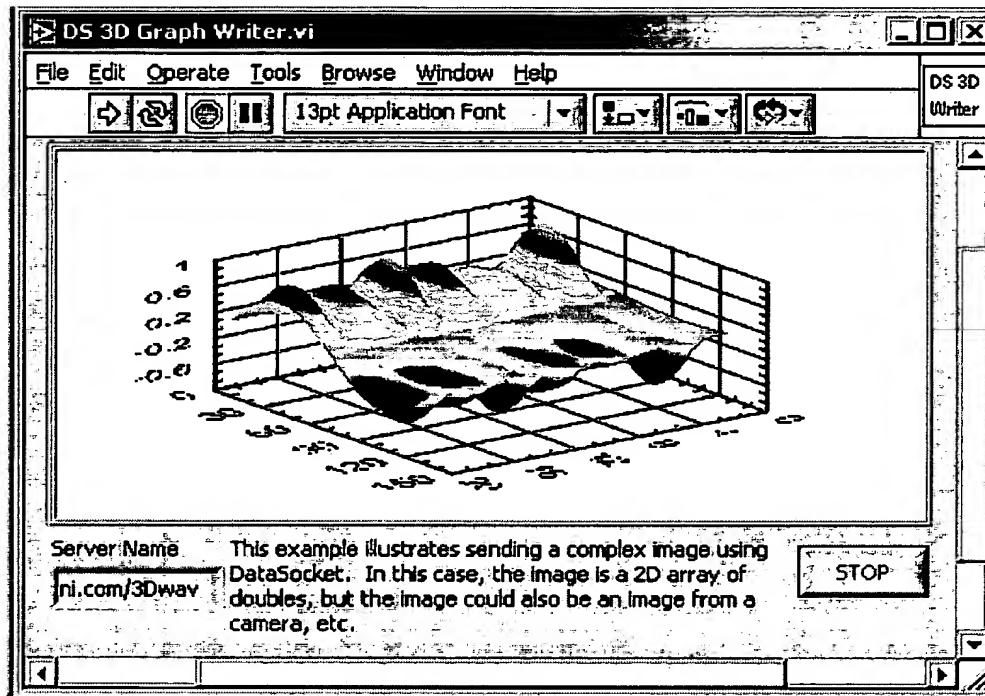 


FIG. 23

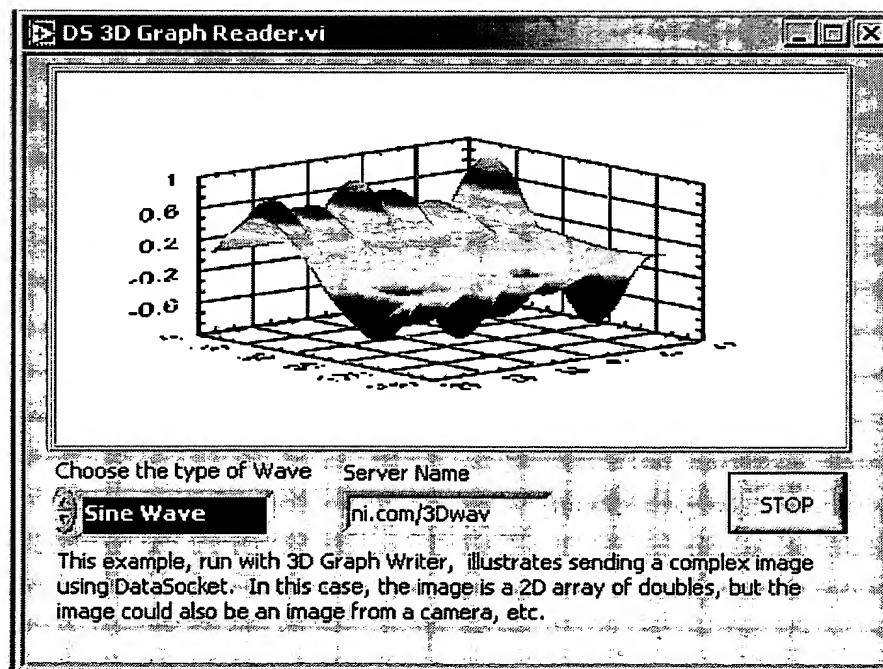 


FIG. 24

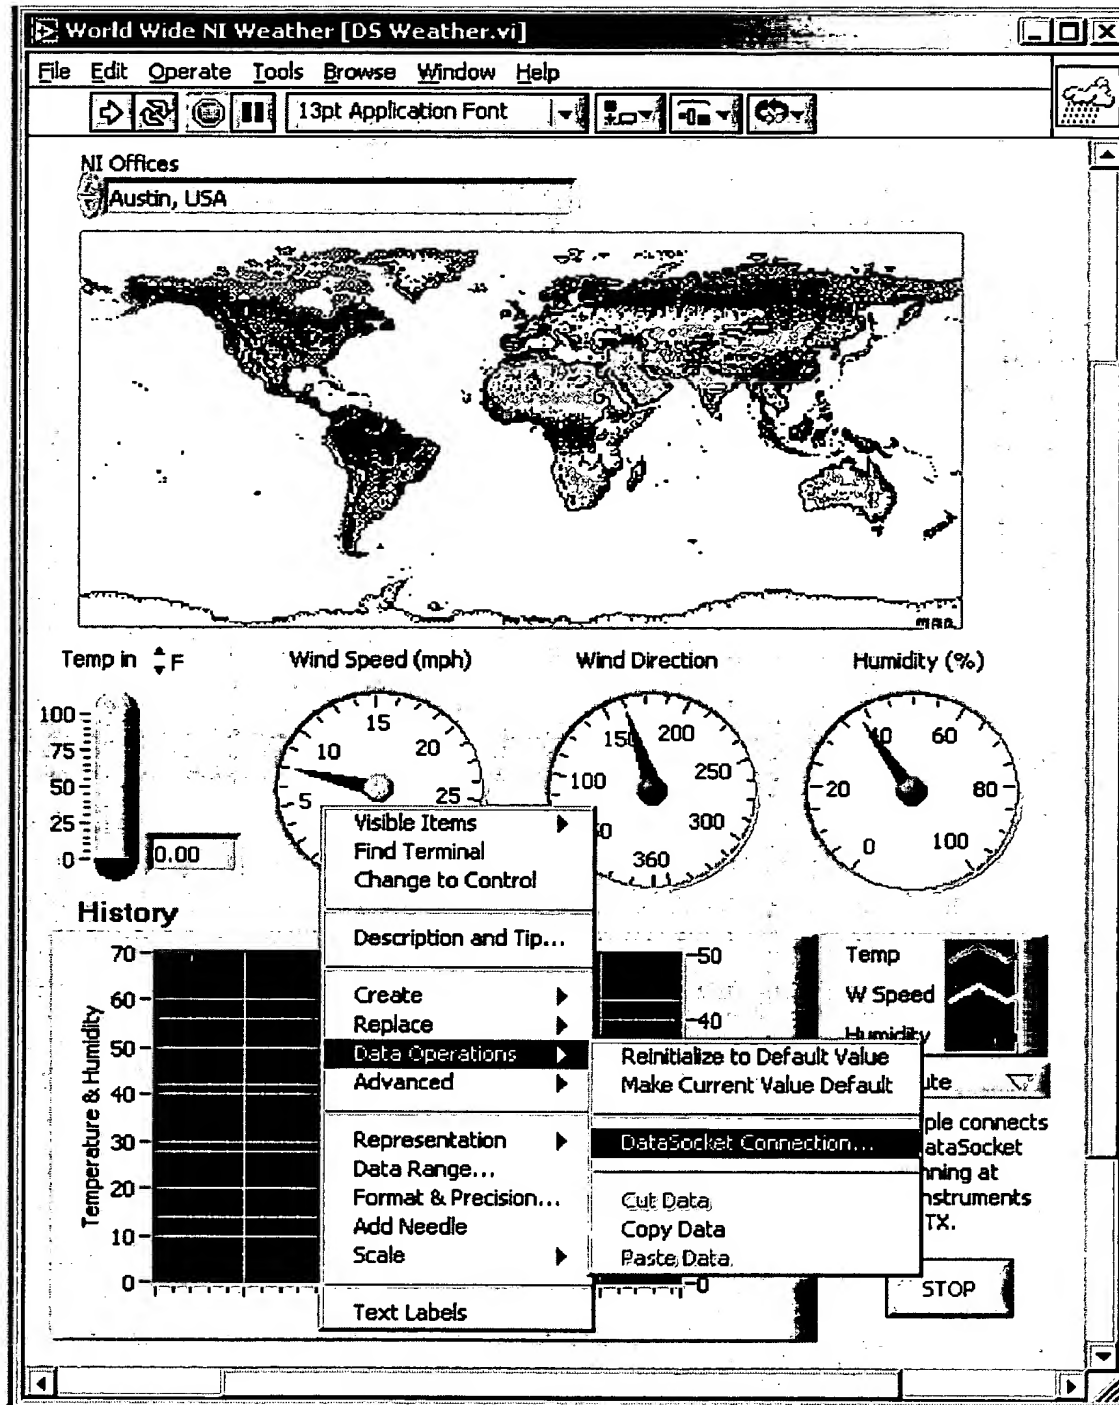 


FIG. 25

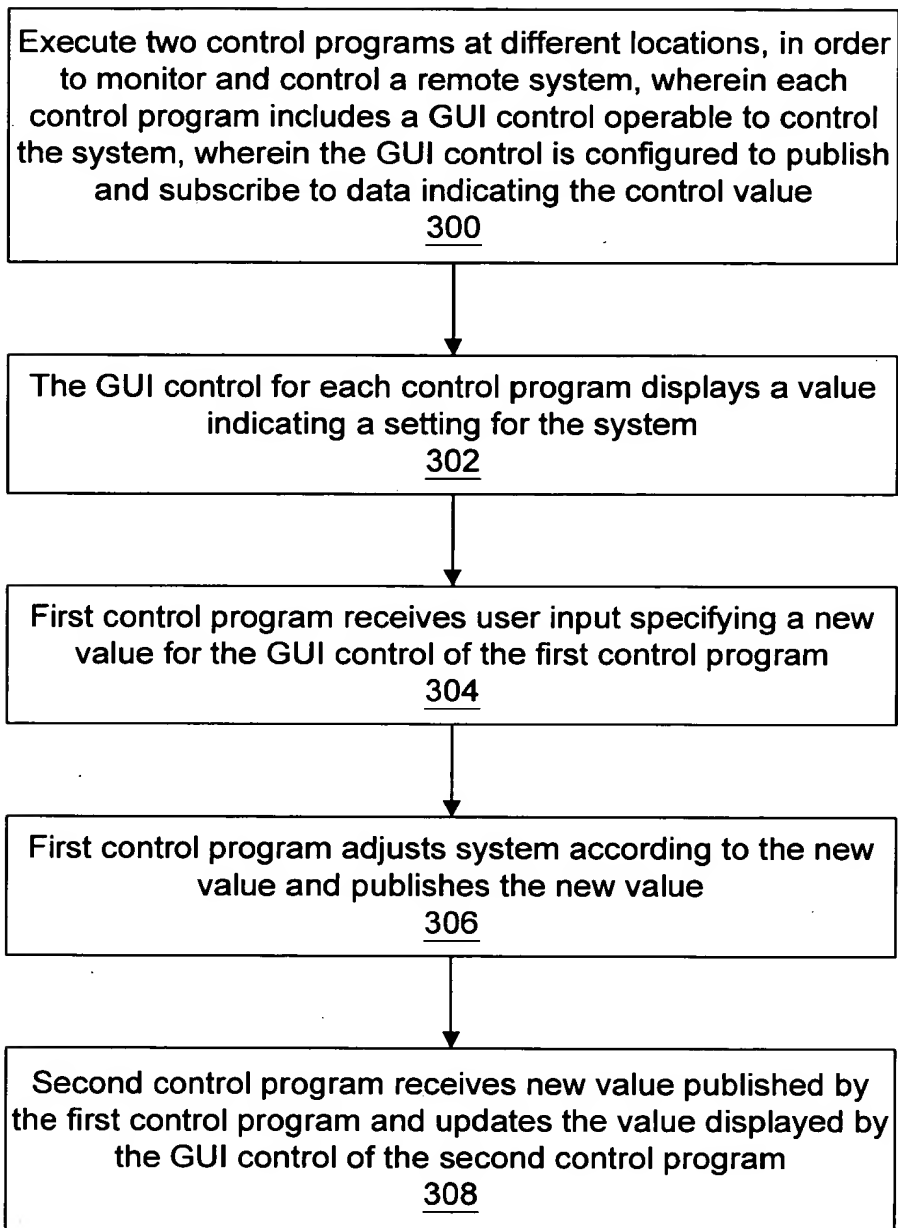 


FIG. 26

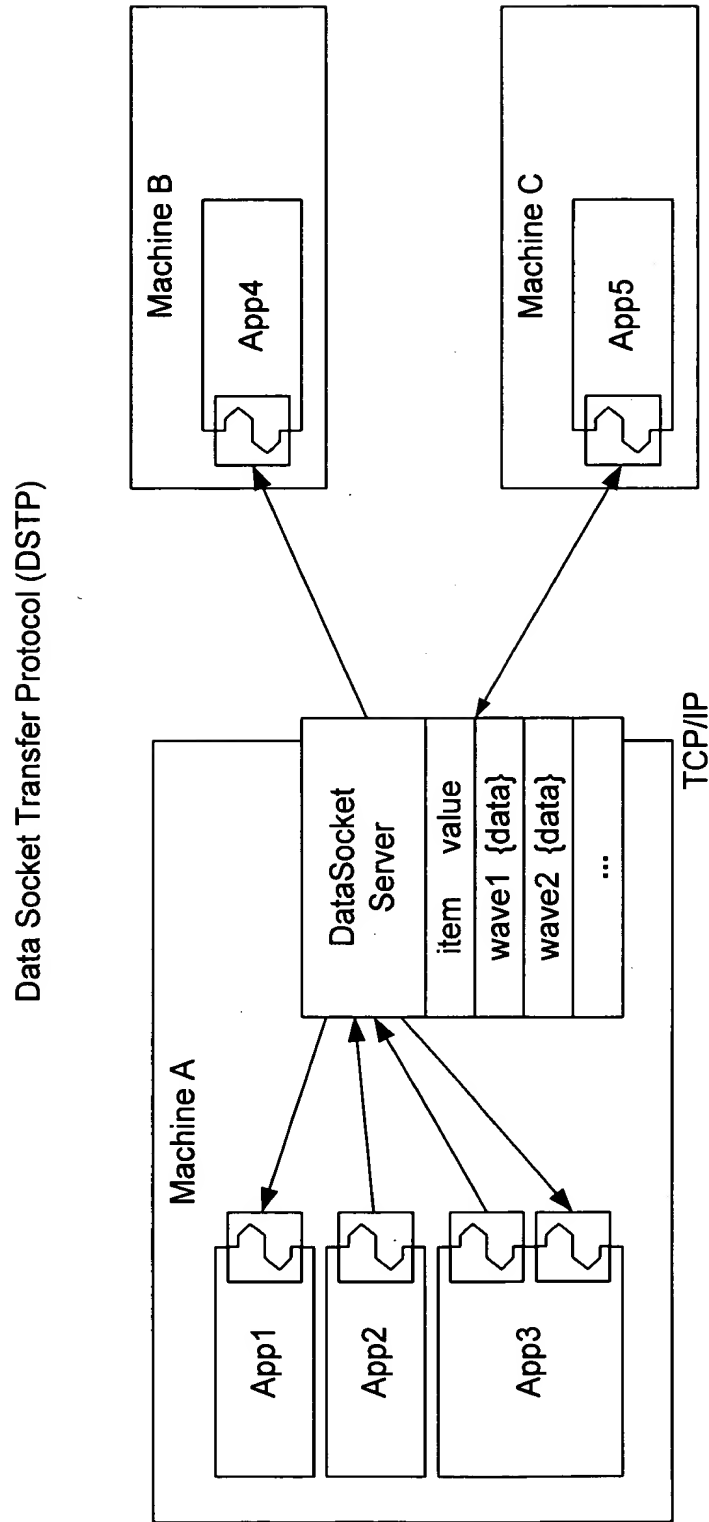 


Fig. 28

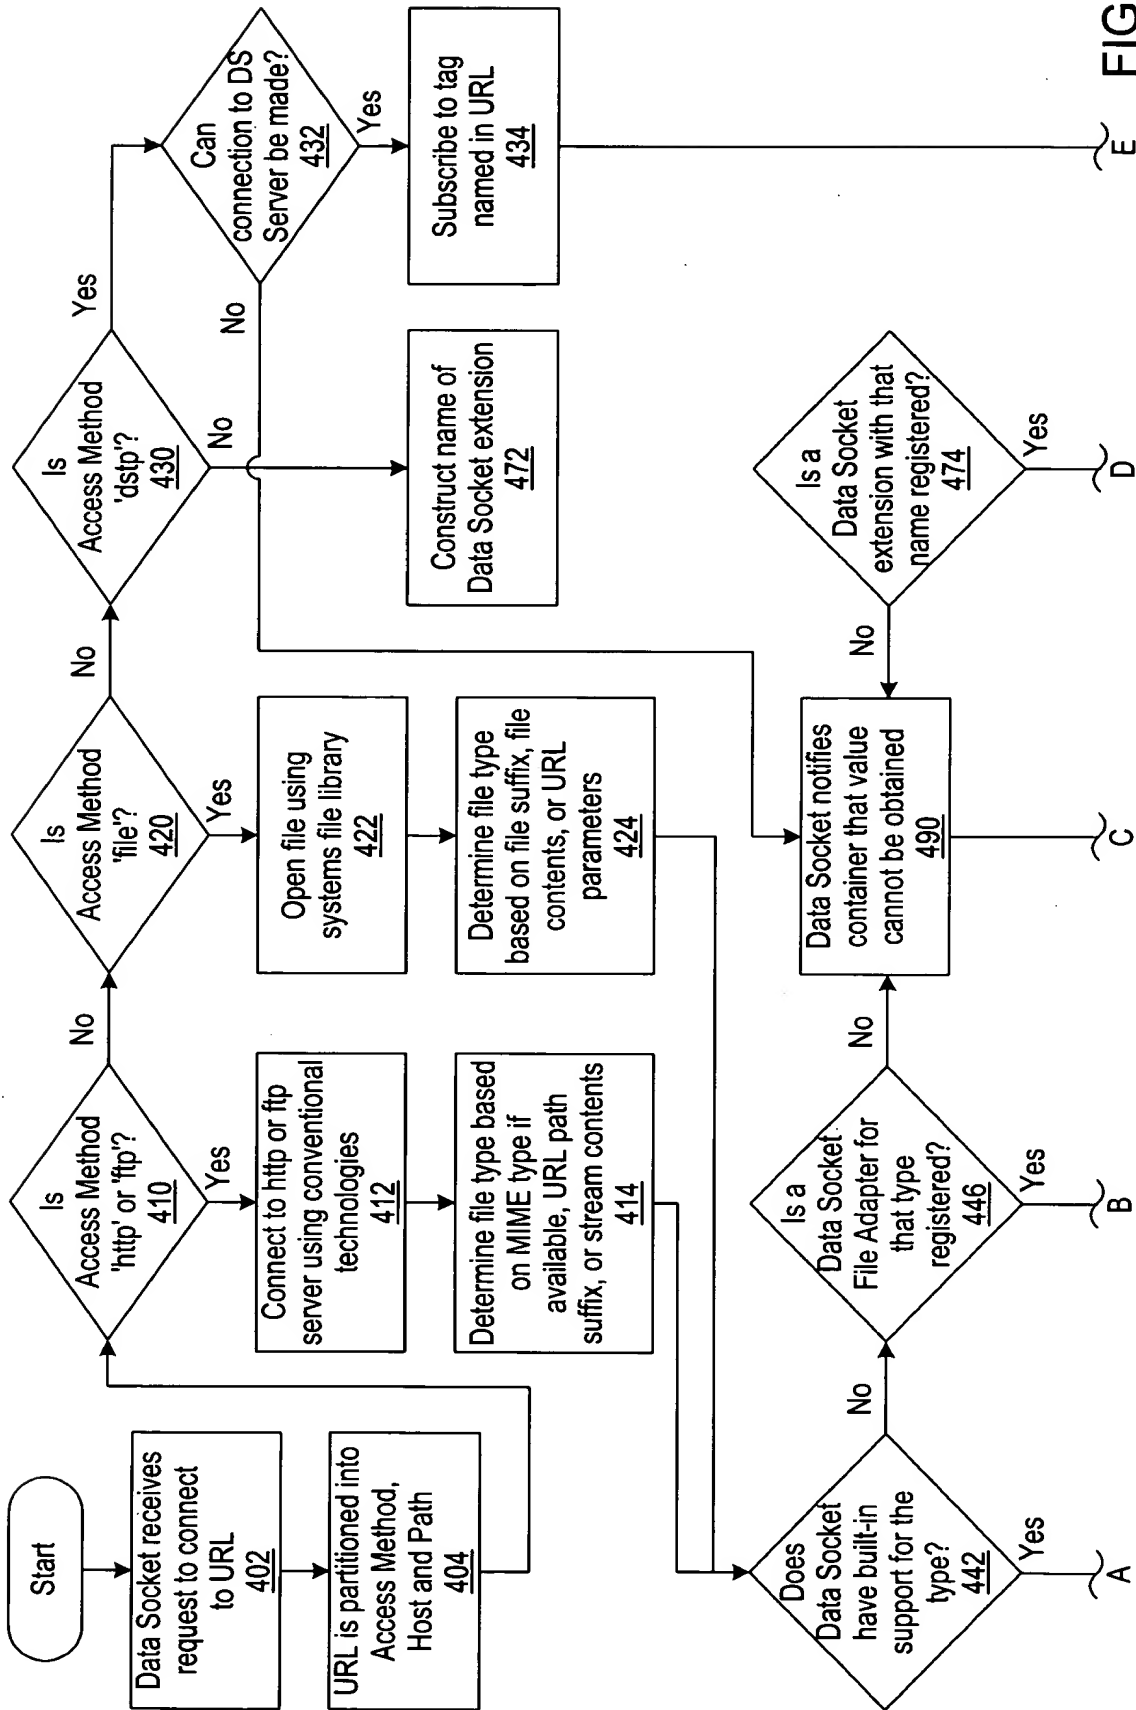 


FIG. 29A

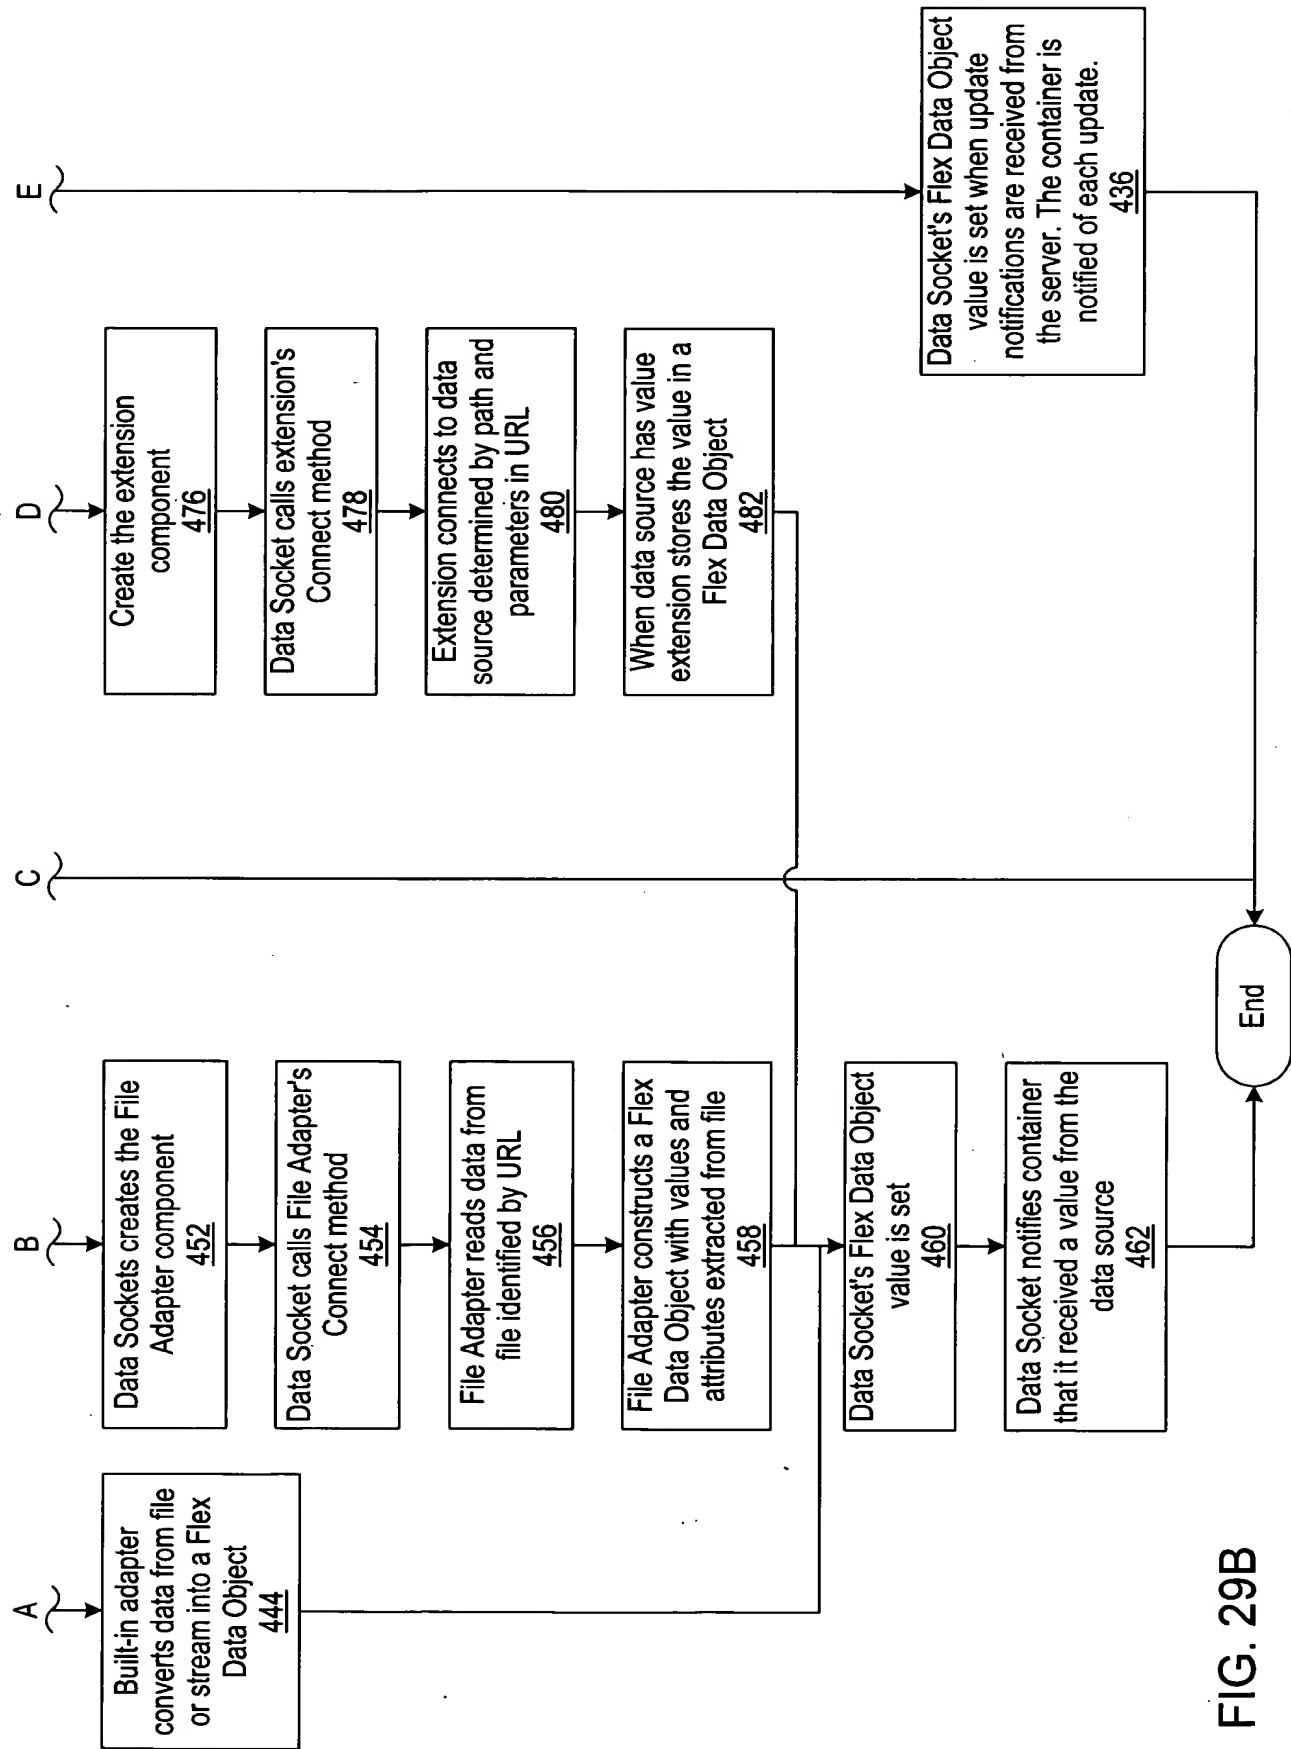 


FIG. 29B